

アバンティ® 1キロ粒剤 田植同時散粒機のダイヤル目安表

表中の数値は、ダイヤルの目盛を示します。なお、本表は目安ですので、実際の散布の際には各機械で確認・調整するよう、お願い致します。

こまきちゃん(クボタ)調整ダイヤルの目安

CS-10

株間 (cm)	4条植え			5条植え			6条植え			8条植え		
	横送り回数											
	16回	20回	26回	16回	20回	26回	16回	20回	26回	16回	20回	26回
12	0.9	1.3	1.8	1.3	1.7	2.3	1.6	2.1	2.8	2.3	2.9	3.9
14	1.2	1.5	2.1	1.5	2.0	2.7	1.9	2.5	3.4	2.7	3.5	4.6
16	1.4	1.8	2.5	1.8	2.4	3.2	2.3	2.9	3.9	3.1	4.0	5.3
18	1.6	2.1	2.8	2.1	2.7	3.6	2.6	3.3	4.4	3.6	4.6	6.0
21	1.9	2.5	3.4	2.5	3.2	4.3	3.1	3.9	5.2	4.2	5.4	7.1
24	2.3	2.9	3.9	2.9	3.7	5.0	3.6	4.6	6.0	4.9	6.2	8.2

CS-20

株間 (cm)	4条植え			5条植え			6条植え			8条植え		
	横送り回数											
	16回	20回	26回	16回	20回	26回	16回	20回	26回	16回	20回	26回
12	1.0	1.2	1.6	1.2	1.5	2.0	1.4	1.8	2.3	1.9	2.4	3.1
14	1.1	1.4	1.8	1.4	1.7	2.3	1.7	2.1	2.7	2.2	2.8	3.7
16	1.3	1.6	2.1	1.6	2.0	2.6	1.9	2.4	3.1	2.6	3.2	4.2
18	1.4	1.8	2.3	1.8	2.3	2.9	2.2	2.7	3.5	2.9	3.6	4.7
21	1.7	2.1	2.7	2.1	2.6	3.4	2.5	3.2	4.1	3.4	4.2	5.5
24	1.9	2.4	3.1	2.4	3.0	3.9	2.9	3.6	4.7	3.9	4.8	6.3

CS-30

株間 (cm)	4条植え			5条植え			6条植え			8条植え		
	横送り回数											
	16回	20回	26回	16回	20回	26回	16回	20回	26回	16回	20回	26回
12	0.9	1.3	1.8	1.3	1.7	2.3	1.6	2.1	2.8	2.3	2.9	3.9
14	1.1	1.5	2.1	1.5	2.0	2.7	1.9	2.5	3.4	2.7	3.5	4.6
16	1.3	1.8	2.5	1.8	2.4	3.2	2.3	2.9	3.9	3.1	4.0	5.3
18	1.5	2.1	2.8	2.1	2.7	3.6	2.6	3.3	4.4	3.6	4.6	6.0
21	1.7	2.5	3.4	2.5	3.2	4.3	3.1	3.9	5.2	4.2	5.4	7.1
24	2.3	2.9	3.9	2.9	3.7	5.0	3.6	4.6	6.0	4.9	6.2	8.2
30	2.9	3.7	5.0	3.7	4.8	6.3	4.6	5.8	7.7	6.2	7.9	10.3

こまきちゃん(井関農機)調整ダイヤルの目安

SCS-10

株間 (cm)	4条植え		5条植え					6条植え					7条植え					8条植え				
	横送り回数																					
	20	24	16	18	20	24	28	16	18	20	24	28	16	18	20	24	28	16	18	20	24	28
14	1.1	1.3	1.1	1.2	1.4	1.8	2.1	1.3	1.6	1.8	2.2	2.6	1.6	1.9	2.1	2.6	3.1	1.9	2.2	2.5	3.1	3.7
16	1.3	1.6	1.3	1.5	1.7	2.1	2.5	1.6	1.8	2.1	2.6	3.1	1.9	2.2	2.5	3.1	3.7	2.3	2.6	2.9	3.6	4.2
18	1.5	1.8	1.5	1.7	1.9	2.4	2.9	1.8	2.1	2.4	3.0	3.5	2.2	2.5	2.9	3.5	4.2	2.6	3.0	3.3	4.1	4.8
22	1.9	2.3	1.9	2.2	2.4	3.0	3.6	2.3	2.7	3.0	3.7	4.4	2.8	3.2	3.6	4.4	5.2	3.2	3.7	4.1	5.1	6.0
23	2.0	2.5	2.0	2.3	2.6	3.2	3.8	2.5	2.8	3.2	3.9	4.6	2.9	3.3	3.8	4.6	5.4	3.4	3.9	4.4	5.3	6.3
26	2.3	2.8	2.3	2.6	3.0	3.6	4.3	2.8	3.2	3.6	4.4	5.2	3.4	3.8	4.3	5.2	6.2	3.9	4.4	5.0	6.0	7.1
30	2.7	3.3	2.7	3.1	3.5	4.3	5.0	3.3	3.8	4.3	5.2	6.1	3.9	4.5	5.0	6.1	7.2	4.6	5.2	5.8	7.0	8.3

SCS-30

株間 (cm)	4条植え		5条植え					6条植え					7条植え					8条植え				
	横送り回数																					
	20	24	16	18	20	24	28	16	18	20	24	28	16	18	20	24	28	16	18	20	24	28
14	1.0	1.3	1.0	1.2	1.3	1.6	1.9	1.3	1.4	1.6	2.0	2.3	1.5	1.7	1.9	2.3	2.7	1.7	2.0	2.2	2.6	3.1
16	1.2	1.5	1.2	1.4	1.5	1.9	2.2	1.5	1.7	1.9	2.2	2.6	1.7	2.0	2.2	2.6	3.1	2.0	2.2	2.5	3.0	3.5
18	1.4	1.7	1.4	1.6	1.7	2.1	2.5	1.7	1.9	2.1	2.5	3.0	2.0	2.2	2.5	3.0	3.5	2.2	2.5	2.8	3.4	4.0
22	1.7	2.0	1.7	1.9	2.1	2.6	3.0	2.0	2.3	2.6	3.1	3.6	2.4	2.7	3.0	3.6	4.3	2.8	3.1	3.5	4.2	4.9
23	1.8	2.1	1.8	2.0	2.2	2.7	3.2	2.1	2.4	2.7	3.3	3.8	2.5	2.8	3.2	3.8	4.5	2.9	3.3	3.6	4.4	5.1
26	2.0	2.4	2.0	2.3	2.5	3.1	3.6	2.4	2.8	3.1	3.7	4.3	2.9	3.2	3.6	4.3	5.1	3.3	3.7	4.1	5.0	5.8
30	2.3	2.8	2.3	2.6	2.9	3.6	4.2	2.8	3.2	3.6	4.3	5.0	3.3	3.7	4.2	5.0	5.9	3.8	4.3	4.8	5.7	6.7

自然に学び 自然を守る



(2019-04)

アバンティ® 1キロ粒剤 田植同時散粒機のダイヤル目安表

表中の数値は、ダイヤルの目盛を示します。なお、本表は目安ですので、実際の散布の際には各機械で確認・調整するよう、お願い致します。
まぐべえⅡ/イノベーターⅡ(丸山製作所)調整ダイヤルの目安

MGT-800A/MGT-800B

	株間 (cm)	横送り回数							
		16	18	20	22	24	26	28	30
4条植え	14	-	-	-	-	-	1.0	1.3	1.3
	16	-	-	-	1.0	1.3	1.3	1.5	1.8
	18	-	-	1.0	1.3	1.5	1.5	1.8	2.0
	22	1.0	1.3	1.5	1.8	2.0	2.0	2.3	2.5
	26	1.3	1.5	2.0	2.0	2.3	2.5	2.5	2.8
	28	1.5	1.8	2.0	2.3	2.5	2.5	2.8	3.0
5条植え	14	-	-	1.0	1.3	1.3	1.5	1.8	2.0
	16	-	1.0	1.3	1.5	1.8	2.0	2.0	2.3
	18	1.0	1.3	1.5	1.8	2.0	2.3	2.3	2.5
	22	1.5	1.8	2.0	2.3	2.5	2.5	2.8	3.0
	26	2.0	2.3	2.3	2.5	2.8	3.0	3.3	3.5
	28	2.0	2.3	2.5	2.8	3.0	3.3	3.5	3.5
6条植え	14	1.0	1.0	1.3	1.5	1.8	2.0	2.3	2.3
	16	1.3	1.5	1.8	2.0	2.0	2.3	2.5	2.5
	18	1.5	1.8	2.0	2.3	2.3	2.5	2.8	3.0
	22	2.0	2.3	2.5	2.5	2.8	3.0	3.3	3.5
	26	2.3	2.5	2.8	3.0	3.3	3.5	3.8	4.0
	28	2.5	2.8	3.0	3.3	3.5	3.8	4.0	4.3
8条植え	14	1.3	1.5	1.8	2.0	2.3	2.3	2.5	2.8
	16	1.5	1.8	2.0	2.3	2.5	2.5	2.8	3.0
	18	1.8	2.0	2.3	2.5	2.8	3.0	3.0	3.3
	22	2.3	2.5	2.8	3.0	3.3	3.5	3.8	4.0
	26	2.5	3.0	3.3	3.5	3.8	4.0	4.5	4.8
	28	2.8	3.0	3.5	3.8	4.0	4.5	4.8	5.0
10条植え	14	1.5	1.8	2.0	2.3	2.5	2.5	2.8	3.0
	16	2.0	2.0	2.3	2.5	2.8	3.0	3.3	3.3
	18	2.0	2.3	2.5	2.8	3.0	3.3	3.5	3.8
	22	2.5	2.8	3.0	3.3	3.8	4.0	4.3	4.5
	26	3.0	3.3	3.5	4.0	4.3	4.8	5.0	5.3
	28	3.3	3.5	3.8	4.3	4.8	5.0	5.3	5.8
30	3.3	3.8	4.0	4.5	5.0	5.3	5.8	6.0	

GSシリーズ(共立)調整ダイヤルの目安 ※取扱説明書を参照する場合は、グループB(小-中)になります。

GS1A/GS2

低速モード

	植付株数(/3.3m ²)			
	40株	50株	60株	70株
4条植え	5.8	5.3	4.8	4.3
5条植え	6.8	5.8	5.3	4.8
6条植え	7.3	6.3	5.8	5.3

中速モード

	植付株数(/3.3m ²)				
	40株	50株	60株	70株	80株
4条植え	7.3	6.8	6.3	5.8	5.3
5条植え	8.3	7.3	6.8	6.3	5.8
6条植え	8.8	7.8	7.3	6.8	6.3

高速モード

	植付株数(/3.3m ²)				
	40株	50株	60株	70株	80株
4条植え	-	8.3	7.8	7.3	6.8
5条植え	-	8.8	8.3	7.8	7.3
6条植え	-	9.3	8.8	8.3	7.8

GS1AW/GS2W

低速モード

	植付株数(/3.3m ²)			
	40株	50株	60株	70株
7条植え	6.8	5.8	5.3	4.8
8条植え	7.3	6.3	5.8	5.3
10条植え	8.8	7.3	6.8	5.8

中速モード

	植付株数(/3.3m ²)				
	40株	50株	60株	70株	80株
7条植え	8.3	7.3	6.8	6.3	5.8
8条植え	8.8	7.8	7.3	6.8	6.3
10条植え	10.3	8.8	8.3	7.3	6.8

高速モード

	植付株数(/3.3m ²)				
	40株	50株	60株	70株	80株
7条植え	-	8.8	8.3	7.8	7.3
8条植え	-	8.8	8.8	8.3	7.8
10条植え	-	10.3	9.8	8.8	8.3

PSRシリーズ(ヤンマー)調整ダイヤルの目安

	植付株数(/3.3m ²)											
	37株	40株	43株	45株	50株	55株	60株	65株	70株	80株	85株	90株
4条植え	2.7	2.5	2.3	2.2	2.0	1.8	1.6	1.5	1.3	1.2	1.1	1.0
5条植え	3.5	3.2	3.0	2.8	2.5	2.3	2.0	1.9	1.7	1.5	1.4	1.3
6条植え	4.2	3.9	3.6	3.4	3.1	2.7	2.5	2.3	2.1	1.8	1.7	1.6
7条植え	5.0	4.6	4.2	4.0	3.6	3.3	3.0	2.7	2.5	2.2	2.0	1.9
8条植え	5.7	5.3	4.9	4.6	4.1	3.8	3.4	3.1	2.9	2.5	2.3	2.2

自然に学び 自然を守る



(2019-04)