



田植同時散粒機のダイヤル目安表

表中の数値は、ダイヤルの目盛を示します。なお、本表は目安ですので、実際の散布の際には各機械で確認・調整するよう、お願い致します。

こまきちゃん(クボタ)調整ダイヤルの目安

※ 網掛けで示した数値は、高速運転の際に、CS-10では目盛8以上。CS-20、30では目盛9以上で吐出量が飽和するため、撒布できないことがあります。

株間 (cm)	4条植え			5条植え			6条植え			8条植え			10条植え			PTO検出(POP)		
	横送り回数									4条	5条	6条						
	16回	20回	26回	16回	20回	26回	16回	20回	26回				16回	20回	26回	16回	20回	26回
12	1.3	1.7	2.4	1.7	2.3	3.0	2.2	2.8	3.7	3.0	3.8	5.1	3.8	4.9	6.5	1.5	2.0	2.5
14	1.6	2.1	2.8	2.1	2.7	3.6	2.6	3.3	4.4	3.6	4.5	6.0	4.5	5.8	7.6	1.8	2.4	2.9
16	1.9	2.4	3.3	2.4	3.1	4.2	3.0	3.8	5.1	4.1	5.2	6.9	5.2	6.7	8.8	2.2	2.8	3.4
18	2.2	2.8	3.7	2.8	3.6	4.8	3.4	4.4	5.8	4.7	6.0	7.9	6.0	7.5	9.9	2.5	3.2	3.9
21	2.6	3.3	4.4	3.3	4.2	5.6	4.1	5.2	6.8	5.5	7.0	9.2	7.0	8.9	11.6	2.9	3.8	4.6
24	3.0	3.8	5.1	3.8	4.9	6.5	4.7	6.0	7.9	6.4	8.1	10.6	8.1	10.2	—	3.4	4.4	5.3

株間 (cm)	4条植え			5条植え			6条植え			8条植え			10条植え			PTO検出(POP)		
	横送り回数									4条	5条	6条						
	16回	20回	26回	16回	20回	26回	16回	20回	26回				16回	20回	26回	16回	20回	26回
12	1.2	1.5	2.0	1.5	1.9	2.5	1.8	2.3	3.0	2.5	3.1	4.0	3.1	3.9	5.0	1.4	1.7	2.1
14	1.4	1.8	2.3	1.8	2.2	2.9	2.2	2.7	3.5	2.9	3.6	4.7	3.6	4.5	5.9	1.6	2.0	2.4
16	1.6	2.1	2.7	2.1	2.6	3.3	2.5	3.1	4.0	3.3	4.1	5.4	4.1	5.2	6.7	1.8	2.3	2.8
18	1.8	2.3	3.0	2.3	2.9	3.8	2.8	3.5	4.5	3.7	4.6	6.0	4.6	5.8	7.6	2.1	2.6	3.1
21	2.2	2.7	3.5	2.7	3.4	4.4	3.2	4.1	5.3	4.3	5.4	7.0	5.4	6.8	8.8	2.4	3.0	3.7
24	2.5	3.1	4.0	3.1	3.9	5.0	3.7	4.6	6.0	5.0	6.2	8.1	6.2	7.7	10.1	2.8	3.5	4.2

株間 (cm)	4条植え			5条植え			6条植え			8条植え			10条植え			PTO検出(POP)		
	横送り回数									4条	5条	6条						
	16回	20回	26回	16回	20回	26回	16回	20回	26回				16回	20回	26回	16回	20回	26回
12	1.2	1.6	2.1	1.6	2.0	2.6	1.9	2.4	3.1	2.6	3.2	4.2	3.2	4.1	5.3	1.4	1.8	2.2
14	1.5	1.8	2.4	1.8	2.3	3.1	2.2	2.8	3.7	3.0	3.8	4.9	3.8	4.7	6.2	1.7	2.1	2.5
16	1.7	2.1	2.8	2.1	2.7	3.5	2.6	3.2	4.2	3.5	4.3	5.7	4.3	5.4	7.1	1.9	2.4	2.9
18	1.9	2.4	3.1	2.4	3.0	4.0	2.9	3.6	4.8	3.9	4.9	6.4	4.9	6.1	8.0	2.2	2.7	3.3
21	2.2	2.8	3.7	2.8	3.5	4.6	3.4	4.3	5.6	4.6	5.7	7.5	5.7	7.2	9.3	2.5	3.2	3.8
24	2.6	3.2	4.2	3.2	4.1	5.3	3.9	4.9	6.4	5.2	6.5	8.5	6.5	8.2	10.7	2.9	3.6	4.4

株間 (cm)	5条植え	6条植え	8条植え
14	1.9	2.3	3.1
16	2.2	2.7	3.6
18	2.5	3.0	4.0
21	2.9	3.5	4.7
24	3.3	4.0	5.4
30	4.2	5.0	6.8

株間 (cm)	こまきちゃんmini(クボタ)調整ダイヤルの目安			
	条数と横送り回数(回)			
	4条植え		5条植え	
	20回	26回	20回	26回
14	3.5	4.5	4.5	5.8
16	4.0	5.5	5.0	6.8
18	4.5	5.8	5.8	7.5
21	5.3	7.0	6.8	8.8
24	6.0	8.0	7.8	10.0
28	7.0	9.3	9.0	12.0

こまきちゃん(井関農機)調整ダイヤルの目安

株間 (cm)	4条植え			5条植え			6条植え			7条植え			8条植え									
	横送り回数																					
	20	24	16	18	20	24	28	16	18	20	24	28	16	18	20	24	28					
14	1.5	1.8	1.5	1.7	1.9	2.4	2.9	1.8	2.1	2.4	2.9	3.5	2.2	2.5	2.9	3.5	4.1	2.6	2.9	3.3	4.1	4.8
16	1.7	2.2	1.7	2.0	2.3	2.8	3.3	2.2	2.5	2.8	3.4	4.1	2.6	2.9	3.3	4.1	4.8	3.0	3.4	3.8	4.7	5.5
18	2.0	2.5	2.0	2.3	2.6	3.2	3.8	2.5	2.8	3.2	3.9	4.6	2.9	3.4	3.8	4.6	5.4	3.4	3.9	4.4	5.3	6.3
22	2.5	3.1	2.5	2.9	3.2	4.0	4.7	3.1	3.5	4.0	4.8	5.7	3.7	4.2	4.7	5.7	6.7	4.3	4.8	5.4	6.6	7.7
23	2.7	3.3	2.7	3.0	3.4	4.2	4.9	3.3	3.7	4.2	5.1	6.0	3.9	4.4	4.9	6.0	7.1	4.5	5.1	5.7	6.9	8.1
26	3.0	3.7	3.0	3.5	3.9	4.8	5.6	3.7	4.3	4.8	5.8	6.8	4.4	5.0	5.6	6.8	8.0	5.1	5.8	6.5	7.9	9.2
30	3.6	4.4	3.6	4.1	4.6	5.6	6.5	4.4	5.0	5.6	6.7	7.9	5.2	5.9	6.5	7.9	9.3	6.0	6.7	7.5	9.1	10.7

株間 (cm)	4条植え			5条植え			6条植え			7条植え			8条植え									
	横送り回数																					
	20	24	16	18	20	24	28	16	18	20	24	28	16	18	20	24	28					
14	1.4	1.7	1.4	1.5	1.7	2.1	2.5	1.7	1.9	2.1	2.5	3.0	1.9	2.2	2.5	3.0	3.5	2.2	2.5	2.8	3.4	4.0
16	1.6	1.9	1.6	1.8	2.0	2.4	2.8	1.9	2.2	2.4	2.9	3.4	2.2	2.5	2.8	3.4	4.0	2.6	2.9	3.2	3.9	4.6
18	1.8	2.2	1.8	2.0	2.2	2.7	3.2	2.2	2.4	2.7	3.3	3.8	2.5	2.9	3.2	3.8	4.5	2.9	3.3	3.6	4.4	5.1
22	2.2	2.6	2.2	2.5	2.8	3.3	3.9	2.6	3.0	3.3	4.0	4.7	3.1	3.5	3.9	4.7	5.5	3.6	4.0	4.5	5.4	6.3
23	2.3	2.8	2.3	2.6	2.9	3.5	4.1	2.8	3.1	3.5	4.2	4.9	3.2	3.7	4.1	4.9	5.8	3.7	4.2	4.7	5.6	6.6
26	2.6	3.1	2.6	2.9	3.3	4.0	4.6	3.1	3.6	4.0	4.8	5.6	3.7	4.2	4.6	5.6	6.5	4.2	4.8	5.3	6.4	7.5
30	3.0	3.6	3.0	3.4	3.8	4.6	5.4	3.6	4.1	4.6	5.5	6.4	4.3	4.8	5.4	6.4	7.5	4.9	5.5	6.1	7.4	8.6

田植同時散粒機のダイヤル目安表

表中の数値は、ダイヤルの目盛を示します。なお、本表は目安ですので、実際の散布の際には各機械で確認・調整するよう、お願い致します。

まくべえⅡ/イノベーターⅡ(丸山製作所)調整ダイヤルの目安

MGT-800A/MGT-800B

	株間 (cm)	横送り回数					
		16	18	20	22	24	26
4条植え	12	3.3	3.5	3.7	3.8	4.0	4.1
	14	3.6	3.7	3.9	4.1	4.3	4.4
	16	3.8	4.0	4.2	4.4	4.5	4.7
	18	4.0	4.2	4.4	4.6	4.8	5.0
	21	4.3	4.5	4.7	4.9	5.2	5.4
	24	4.6	4.8	5.0	5.3	5.5	5.7
	28	4.9	5.2	5.4	5.7	5.9	6.2
5条植え	12	3.7	3.9	4.0	4.2	4.4	4.6
	14	3.9	4.1	4.3	4.5	4.7	4.9
	16	4.2	4.4	4.6	4.8	5.0	5.2
	18	4.4	4.6	4.9	5.1	5.3	5.5
	21	4.7	5.0	5.3	5.5	5.7	6.0
	24	5.0	5.3	5.6	5.9	6.1	6.4
6条植え	12	4.0	4.2	4.4	4.6	4.8	5.0
	14	4.3	4.5	4.7	4.9	5.2	5.4
	16	4.5	4.8	5.0	5.3	5.5	5.7
	18	4.8	5.1	5.3	5.6	5.8	6.0
	21	5.2	5.5	5.7	6.0	6.3	6.5
	24	5.5	5.8	6.1	6.4	6.7	7.0
8条植え	12	4.5	4.8	5.0	5.3	5.5	5.7
	14	4.9	5.2	5.4	5.7	5.9	6.2
	16	5.2	5.5	5.8	6.1	6.3	6.6
	18	5.5	5.8	6.1	6.4	6.7	7.0
	21	5.9	6.3	6.6	6.9	7.2	7.5
	24	6.3	6.7	7.0	7.4	7.7	8.0
10条植え	12	5.0	5.3	5.6	5.9	6.1	6.4
	14	5.4	5.7	6.0	6.3	6.6	6.9
	16	5.8	6.1	6.4	6.7	7.0	7.3
	18	6.1	6.5	6.8	7.1	7.5	7.8
	21	6.6	7.0	7.4	7.7	8.1	8.4
	24	7.0	7.5	7.9	8.2	8.6	9.0
28	7.6	8.1	8.5	8.9	9.3	9.7	

MGT-500A/MGT-500B

	株間 (cm)	横送り回数					
		16	18	20	22	24	26
4条植え	12	2.1	2.6	2.8	3.2	3.5	3.7
	13	2.4	2.8	3.1	3.5	3.7	4.0
	14	2.6	3.0	3.3	3.7	4.0	4.4
	16	3.1	3.5	3.9	4.2	4.5	4.8
	18	3.5	3.9	4.2	4.6	5.0	5.3
	21	4.0	4.5	4.8	5.2	5.6	5.9
	24	4.5	5.0	5.3	5.8	6.1	6.5
	28	5.1	5.6	6.0	6.5	6.9	7.3
5条植え	12	2.8	3.2	3.6	4.0	4.2	4.6
	13	3.1	3.5	3.9	4.2	4.6	4.8
	14	3.3	3.7	4.1	4.5	4.8	5.2
	16	3.9	4.2	4.6	5.1	5.3	5.7
	18	4.2	4.7	5.1	5.6	5.9	6.2
	21	4.8	5.3	5.8	6.1	6.6	6.9
	24	5.3	5.9	6.4	6.8	7.3	7.6
6条植え	12	3.5	3.9	4.2	4.6	5.0	5.3
	13	3.7	4.2	4.6	5.0	5.3	5.6
	14	4.0	4.5	4.8	5.2	5.6	5.9
	16	4.5	5.0	5.3	5.8	6.1	6.5
	18	5.0	5.4	5.9	6.2	6.7	7.2
	21	5.6	6.1	6.6	7.1	7.5	8.0
	24	6.1	6.7	7.3	7.8	8.3	8.8
	28	6.9	7.5	8.1	8.7	9.5	10.1
8条植え	12	4.5	5.0	5.3	5.8	6.1	6.5
	13	4.8	5.3	5.7	6.1	6.5	6.9
	14	5.1	5.6	6.0	6.5	6.9	7.3
	16	5.7	6.1	6.6	7.2	7.6	8.1
	18	6.1	6.7	7.3	7.8	8.3	8.8
	21	6.9	7.5	8.1	8.7	9.5	10.1
	24	7.6	8.3	9.1	9.8	10.7	11.5
	28	8.6	9.5	10.4	11.4	12.5	13.9

GSシリーズ(共立)調整ダイヤルの目安 ※ 取扱説明書を参照する場合は、グループA(小)になります。

GS1A/GS2

低速モード

	植付株数(/3.3m ²)			
	40株	50株	60株	70株
4条植え	4.5	4.0	3.5	3.0
5条植え	5.0	4.5	4.0	3.5
6条植え	6.0	5.0	4.5	4.0

中速モード

	植付株数(/3.3m ²)				
	40株	50株	60株	70株	80株
4条植え	6.0	5.5	5.0	4.5	4.0
5条植え	6.5	6.0	5.5	5.0	4.5
6条植え	7.5	6.5	6.0	5.5	5.0

高速モード

	植付株数(/3.3m ²)				
	40株	50株	60株	70株	80株
4条植え	7.5	7.0	6.5	6.0	5.5
5条植え	8.0	7.5	7.0	6.5	6.0
6条植え	9.0	8.0	7.5	7.0	6.5

GS1AW/GS2W

低速モード

	植付株数(/3.3m ²)			
	40株	50株	60株	70株
7条植え	5.5	4.5	4.0	3.5
8条植え	6.0	5.0	4.0	3.5
10条植え	7.0	6.0	5.0	4.5

低速モード

	植付株数(/3.3m ²)				
	40株	50株	60株	70株	80株
7条植え	7.0	6.0	5.5	5.0	4.5
8条植え	7.5	6.5	5.5	5.0	5.0
10条植え	8.5	7.5	6.5	6.0	5.5

高速モード

	植付株数(/3.3m ²)				
	40株	50株	60株	70株	80株
7条植え	8.5	7.5	7.0	6.5	6.0
8条植え	9.0	8.0	7.0	6.5	6.5
10条植え	10.0	9.0	8.0	7.5	7.0

※ JS-1R、JS-1RW(ヤンマー)はGSシリーズのダイヤル目安を参考にして調整して下さい。

PSRシリーズ(ヤンマー)調整ダイヤルの目安

	植付株数(/3.3m ²)					
	40株	50株	60株	70株	80株	90株
4条植え	2.5-3.0	2.0-2.5	1.5-2.0	1.5-2.0	1.0-1.5	1.0-1.5
5条植え	3.0-3.5	2.5-3.0	2.0-2.5	2.0-2.5	1.5-2.0	1.5-2.0
6条植え	4.0-4.5	3.0-3.5	2.5-3.0	2.0-2.5	2.0-2.5	1.5-2.0
8条植え	5.0-5.5	4.0-4.5	3.5-4.0	3.0-3.5	2.5-3.0	2.0-2.5

自然に学び自然を守る



(2020-04)