

# 田植同時散粒機のダイヤル目安表

表中の数値は、ダイヤルの目盛を示します。なお、本表は目安ですので、実際の散布の際には各機械で確認・調整するよう、お願い致します。

※ 網掛けで示した数値は、高速運転の際に、CS-10では目盛8以上。CS-20、30では目盛9以上で吐出量が飽和するため、散布できないことがあります。

## こまきちゃん(クボタ)調整ダイヤルの目安

CS-10

株間 (cm)	4条植え			5条植え			6条植え			8条植え			10条植え			PTO検出(POP)		
	横送り回数									4条	5条	6条						
	16回	20回	26回	16回	20回	26回	16回	20回	26回				16回	20回	26回	16回	20回	26回
12	2.2	2.8	3.8	2.8	3.6	4.8	3.5	4.4	5.9	4.7	6.0	8.0	6.0	7.6	10.0	2.5	3.2	3.9
14	2.6	3.4	4.5	3.4	4.3	5.7	4.1	5.2	6.9	5.6	7.1	9.3	7.1	9.0	11.8	3.0	3.8	4.7
16	3.0	3.9	5.2	3.9	5.0	6.6	4.7	6.0	8.0	6.5	8.2	10.7	8.2	10.3	—	3.5	4.4	5.4
18	3.5	4.4	5.9	4.4	5.6	7.4	5.4	6.8	9.0	7.3	9.2	12.1	9.2	11.6	—	3.9	5.0	6.1
21	4.1	5.2	6.9	5.2	6.6	8.7	6.4	8.0	10.6	8.6	10.8	—	10.8	—	—	4.7	5.9	7.2
24	4.7	6.0	8.0	6.0	7.6	10.0	7.3	9.2	12.1	9.9	12.5	—	12.5	—	—	5.4	6.8	8.3

CS-20

株間 (cm)	4条植え			5条植え			6条植え			8条植え			10条植え			PTO検出(POP)		
	横送り回数									4条	5条	6条						
	16回	20回	26回	16回	20回	26回	16回	20回	26回				16回	20回	26回	16回	20回	26回
12	1.9	2.3	3.0	2.3	2.9	3.8	2.8	3.5	4.6	3.8	4.7	6.1	4.7	5.9	7.6	2.1	2.6	3.2
14	2.2	2.7	3.6	2.7	3.4	4.5	3.3	4.1	5.3	4.4	5.5	7.1	5.5	6.9	8.9	2.5	3.1	3.7
16	2.5	3.1	4.1	3.1	3.9	5.1	3.8	4.7	6.1	5.0	6.3	8.2	6.3	7.8	10.2	2.8	3.5	4.2
18	2.8	3.5	4.6	3.5	4.4	5.7	4.2	5.3	6.9	5.6	7.1	9.2	7.1	8.8	11.5	3.2	4.0	4.8
21	3.3	4.1	5.3	4.1	5.1	6.7	4.9	6.2	8.0	6.6	8.2	10.7	8.2	10.3	—	3.7	4.6	5.6
24	3.8	4.7	6.1	4.7	5.9	7.6	5.6	7.1	9.2	7.5	9.4	12.2	9.4	11.8	—	4.2	5.3	6.4

CS-30

株間 (cm)	4条植え			5条植え			6条植え			8条植え			10条植え			PTO検出(POP)		
	横送り回数									4条	5条	6条						
	16回	20回	26回	16回	20回	26回	16回	20回	26回				16回	20回	26回	16回	20回	26回
12	1.9	2.4	3.2	2.4	3.1	4.0	2.9	3.7	4.8	3.9	4.9	6.5	4.9	6.2	8.1	2.2	2.7	3.3
14	2.3	2.9	3.7	2.9	3.6	4.7	3.4	4.3	5.6	4.6	5.8	7.6	5.8	7.3	9.5	2.6	3.2	3.9
16	2.6	3.3	4.3	3.3	4.1	5.4	3.9	4.9	6.5	5.3	6.6	8.6	6.6	8.3	10.8	2.9	3.7	4.4
18	2.9	3.7	4.8	3.7	4.6	6.1	4.4	5.6	7.3	6.0	7.5	9.7	7.5	9.4	12.2	3.3	4.2	5.0
21	3.4	4.3	5.6	4.3	5.4	7.1	5.2	6.5	8.5	7.0	8.7	11.4	8.7	10.9	—	3.9	4.9	5.9
24	3.9	4.9	6.5	4.9	6.2	8.1	6.0	7.5	9.7	8.0	10.0	13.0	10.0	12.5	—	4.4	5.6	6.7

CS-100

株間 (cm)	5条植え	6条植え	8条植え
14	3.2	3.9	5.2
16	3.7	4.5	6.0
18	4.2	5.0	6.7
21	4.9	5.9	7.9
24	5.6	6.7	9.0
30	7.0	8.5	11.3

## こまきちゃんmini(クボタ)調整ダイヤルの目安

株間 (cm)	4条植え		5条植え	
	横送り回数			
	20回	26回	20回	26回
14	5.8	7.8	7.5	9.8
16	6.8	8.8	8.5	11.3
18	7.8	10.0	9.8	【 1.5 】
21	9.0	11.8	11.5	【 2.0 】
24	10.3	【 1.8 】	【 1.8 】	【 2.5 】
28	12.0	【 2.3 】	【 2.3 】	【 3.3 】

【 】内は3キロ目皿に切り替えて使用する。



こまきちゃん  
左: CS-30  
右: CS-100



こまきちゃんmini  
左: CS-10M-AW  
右: CS-10M-EP4

# 田植同時散粒機のダイヤル目安表

表中の数値は、ダイヤルの目盛を示します。なお、本表は目安ですので、実際の散布の際には各機械で確認・調整するよう、お願い致します。

## こまきちゃん(井関農機)調整ダイヤルの目安

SCS-10

株間 (cm)	4条植え		5条植え					6条植え					7条植え					8条植え				
			横送り回数																			
	20	24	16	18	20	24	28	16	18	20	24	28	16	18	20	24	28	16	18	20	24	28
14	2.4	3.0	2.4	2.8	3.1	3.8	4.5	3.0	3.4	3.8	4.7	5.5	3.5	4.0	4.5	5.5	6.5	4.1	4.7	5.2	6.4	7.5
16	2.8	3.5	2.8	3.2	3.6	4.4	5.2	3.5	3.9	4.4	5.4	6.4	4.1	4.7	5.2	6.4	7.5	4.7	5.4	6.0	7.3	8.6
18	3.2	3.9	3.2	3.7	4.1	5.0	5.9	3.9	4.5	5.0	6.1	7.2	4.7	5.3	5.9	7.2	8.5	5.4	6.1	6.8	8.3	9.7
22	4.0	4.9	4.0	4.6	5.1	6.2	7.3	4.9	5.6	6.2	7.6	8.9	5.8	6.6	7.3	8.9	10.4	6.7	7.6	8.4	10.2	12.0
23	4.2	5.2	4.2	4.8	5.4	6.5	7.7	5.2	5.8	6.5	7.9	9.3	6.1	6.9	7.7	9.3	10.9	7.0	7.9	8.8	10.7	12.5
26	4.8	5.9	4.8	5.5	6.1	7.4	8.7	5.9	6.7	7.4	9.0	10.6	6.9	7.8	8.7	10.6	12.4	8.0	9.0	10.0	12.1	-
30	5.6	6.8	5.6	6.4	7.1	8.6	10.1	6.8	7.7	8.6	10.4	12.2	8.0	9.1	10.1	12.2	-	9.2	10.4	11.6	-	-

SCS-30

株間 (cm)	4条植え		5条植え					6条植え					7条植え					8条植え				
			横送り回数																			
	20	24	16	18	20	24	28	16	18	20	24	28	16	18	20	24	28	16	18	20	24	28
14	2.1	2.6	2.1	2.4	2.7	3.2	3.8	2.6	2.9	3.2	3.9	4.5	3.0	3.4	3.8	4.5	5.3	3.4	3.9	4.3	5.2	6.1
16	2.4	2.9	2.4	2.7	3.1	3.7	4.3	2.9	3.3	3.7	4.4	5.2	3.4	3.9	4.3	5.2	6.1	3.9	4.4	4.9	6.0	7.0
18	2.7	3.3	2.7	3.1	3.5	4.2	4.9	3.3	3.7	4.2	5.0	5.9	3.9	4.4	4.9	5.9	6.9	4.4	5.0	5.6	6.7	7.8
22	3.4	4.1	3.4	3.8	4.2	5.1	6.0	4.1	4.6	5.1	6.1	7.2	4.8	5.4	6.0	7.2	8.4	5.5	6.1	6.8	8.2	9.6
23	3.5	4.3	3.5	4.0	4.4	5.3	6.2	4.3	4.8	5.3	6.4	7.5	5.0	5.6	6.2	7.5	8.8	5.7	6.4	7.2	8.6	10.0
26	4.0	4.8	4.0	4.5	5.0	6.1	7.1	4.8	5.4	6.1	7.3	8.5	5.6	6.4	7.1	8.5	9.9	6.5	7.3	8.1	9.7	11.4
30	4.6	5.6	4.6	5.2	5.8	7.0	8.2	5.6	6.3	7.0	8.4	9.8	6.5	7.3	8.2	9.8	11.5	7.5	8.4	9.4	11.2	13.1

SCS-100

株間 (cm)	5条	6条	7条	8条
Free	5.7	6.8	8.0	9.1

こまきちゃん  
SCS-30



## PSRシリーズ(ヤンマー)調整ダイヤルの目安

	植付株数 (/3.3m <sup>2</sup> )					
	40株	50株	60株	70株	80株	90株
4条植え	3.0	2.3	1.9	1.6	1.4	1.2
5条植え	3.8	3.0	2.5	2.0	1.7	1.5
6条植え	5.0	3.6	3.0	2.5	2.1	1.9
8条植え	6.6	5.4	4.1	3.5	3.1	2.6



# 田植同時散粒機のダイヤル目安表

表中の数値は、ダイヤルの目盛を示します。なお、本表は目安ですので、実際の散布の際には各機械で確認・調整するよう、お願い致します。

## まくべえⅡ／インベーターⅡ(丸山製作所)調整ダイヤルの目安

MGT-800A/MGT-800B

	株間 (cm)	横送り回数							
		16	18	20	22	24	26	28	30
4条植え	14	4.3	4.3	4.5	4.6	4.8	4.9	5.2	5.3
	16	4.5	4.7	4.8	5.0	5.1	5.3	5.5	5.6
	18	4.7	4.8	5.0	5.2	5.4	5.6	5.7	5.9
	22	5.0	5.2	5.4	5.6	5.8	6.0	6.3	6.5
	26	5.3	5.6	5.8	6.0	6.3	6.5	6.8	7.1
	28	5.4	5.7	6.0	6.3	6.5	6.8	7.1	7.4
	30	5.6	5.9	6.2	6.5	6.8	7.1	7.4	7.7
5条植え	14	4.6	4.8	5.0	5.2	5.3	5.5	5.7	5.8
	16	4.8	5.0	5.2	5.4	5.6	5.8	6.0	6.2
	18	5.0	5.2	5.5	5.7	5.9	6.1	6.3	6.5
	22	5.4	5.7	6.0	6.2	6.5	6.7	7.0	7.0
	26	5.8	6.1	6.4	6.7	7.1	7.4	7.7	8.1
	28	6.0	6.3	6.7	7.0	7.4	7.7	8.1	8.5
	30	6.2	6.5	6.9	7.3	7.7	8.1	8.5	8.9
6条植え	14	4.9	5.1	5.3	5.5	5.7	5.9	6.1	6.3
	16	5.1	5.4	5.6	5.9	6.1	6.3	6.5	6.8
	18	5.4	5.6	5.9	6.2	6.4	6.7	6.9	7.2
	22	5.8	6.2	6.5	6.8	7.1	7.5	7.8	8.2
	26	6.3	6.7	7.1	7.5	7.9	8.3	8.7	9.1
	28	6.5	6.9	7.4	7.8	8.3	8.7	9.1	9.5
	30	6.8	7.2	7.7	8.2	8.6	9.1	9.5	9.9
8条植え	14	5.5	5.7	6.0	6.3	6.5	6.8	7.1	7.4
	16	5.8	6.1	6.4	6.7	7.0	7.3	7.7	8.0
	18	6.1	6.4	6.8	7.1	7.5	7.9	8.3	8.6
	22	6.7	7.1	7.6	8.0	8.5	9.0	9.4	9.8
	26	7.3	7.9	8.4	9.0	9.5	9.9	10.3	10.7
	28	7.7	8.3	8.8	9.4	9.9	10.3	10.7	11.1
	30	8.0	8.6	9.2	9.8	10.3	10.7	11.1	11.6
10条植え	14	6.0	6.3	6.7	7.0	7.4	7.7	8.1	8.5
	16	6.4	6.8	7.2	7.6	8.0	8.4	8.8	9.2
	18	6.8	7.2	7.7	8.2	8.6	9.1	9.5	9.9
	22	7.6	8.2	8.7	9.3	9.8	10.2	10.6	11.0
	26	8.4	9.1	9.7	10.2	10.7	11.2	11.6	12.0
	28	8.8	9.5	10.1	10.7	11.1	11.6	12.0	-
	30	9.2	9.9	10.5	11.0	11.6	12.0	-	-

MGT-500A/MGT-500B

	株間 (cm)	横送り回数					
		16	18	20	22	24	26
4条植え	12	4.1	4.2	4.3	4.5	4.6	4.7
	13	4.2	4.3	4.4	4.6	4.7	4.9
	14	4.2	4.4	4.6	4.7	4.9	5.0
	16	4.4	4.6	4.8	5.0	5.1	5.3
	18	4.6	4.8	5.0	5.2	5.4	5.6
	21	4.9	5.1	5.4	5.6	5.8	6.1
	24	5.1	5.4	5.7	6.0	6.2	6.5
	28	5.5	5.8	6.1	6.5	6.8	7.1
5条植え	12	4.3	4.5	4.7	4.8	5.0	5.2
	13	4.4	4.6	4.8	5.0	5.2	5.4
	14	4.6	4.8	5.0	5.2	5.4	5.6
	16	4.8	5.0	5.2	5.5	5.7	5.9
	18	5.0	5.3	5.5	5.8	6.0	6.3
	21	5.4	5.7	5.9	6.2	6.5	6.8
	24	5.7	6.0	6.4	6.7	7.1	7.4
	28	6.1	6.5	6.9	7.3	7.7	8.1
6条植え	12	4.6	4.8	5.0	5.2	5.4	5.6
	13	4.7	5.0	5.2	5.4	5.6	5.8
	14	4.9	5.1	5.4	5.6	5.8	6.1
	16	5.1	5.4	5.7	6.0	6.2	6.5
	18	5.4	5.7	6.0	6.3	6.6	7.0
	21	5.8	6.2	6.5	6.9	7.3	7.6
	24	6.2	6.6	7.1	7.5	7.9	8.3
	28	6.8	7.3	7.7	8.2	8.7	9.2
8条植え	12	5.1	5.4	5.7	6.0	6.2	6.5
	13	5.3	5.6	5.9	6.2	6.5	6.8
	14	5.5	5.8	6.1	6.5	6.8	7.1
	16	5.9	6.2	6.6	7.0	7.3	7.7
	18	6.2	6.6	7.1	7.5	7.9	8.3
	21	6.8	7.3	7.7	8.2	8.7	9.2
	24	7.3	7.9	8.4	9.0	9.5	10.0
	28	8.1	8.7	9.3	10.0	10.6	11.2

## GSシリーズ(共立)調整ダイヤルの目安

※ 取扱説明書を参照する場合は、グループD(小)になります。

※ JS-1R、JS-1RW(ヤンマー)はGSシリーズのダイヤル目安を参考にして調整して下さい。

GS1A/GS2

GS1AW/GS2W

低速モード

低速モード

	植付株数(／3.3m <sup>2</sup> )			
	40株	50株	60株	70株
4条植え	7.5	7.0	6.5	6.0
5条植え	8.0	7.5	7.0	6.5
6条植え	9.0	8.0	7.5	7.0

	植付株数(／3.3m <sup>2</sup> )			
	40株	50株	60株	70株
7条植え	8.5	7.5	7.0	6.5
8条植え	9.0	8.0	7.5	7.0
10条植え	10.0	9.0	8.0	7.5

中速モード

中速モード

	植付株数(／3.3m <sup>2</sup> )				
	40株	50株	60株	70株	80株
4条植え	9.0	8.5	8.0	7.5	7.0
5条植え	9.5	9.0	8.5	8.0	7.5
6条植え	-	9.5	9.0	8.5	8.0

	植付株数(／3.3m <sup>2</sup> )				
	40株	50株	60株	70株	80株
7条植え	10.0	9.0	8.5	8.0	7.5
8条植え	10.5	9.5	9.0	8.5	8.0
10条植え	-	-	9.5	9.0	8.5

高速モード

高速モード

	植付株数(／3.3m <sup>2</sup> )				
	40株	50株	60株	70株	80株
4条植え	-	10.0	9.5	9.0	8.5
5条植え	-	-	10.0	9.5	9.0
6条植え	-	-	-	10.0	9.5

	植付株数(／3.3m <sup>2</sup> )				
	40株	50株	60株	70株	80株
7条植え	-	-	10.0	9.5	9.0
8条植え	-	-	-	10.0	9.5
10条植え	-	-	-	-	10.0

自然に学び自然を守る



(2023-01)