

テッシン® 1キロ粒剤
田植同時散粒機のダイヤル目安表

表中の数値は、ダイヤルの目盛を示します。なお、本表は目安ですので、実際の散布の際には各機械で確認・調整するよう、お願い致します。
 ※ 網掛けで示した数値は高速運転の際に、CS-10では目盛8以上。CS-20、30では目盛9以上で吐出量が飽和するため、散布できないことがあります。

こまきちゃん(クボタ)調整ダイヤルの目安

CS-10

株間 (cm)	4条植え			5条植え			6条植え			8条植え			10条 植え	PTO検出(POP)		
	横送り回数													4条	5条	6条
	16回	20回	26回	16回	20回	26回	16回	20回	26回	16回	20回	26回				
12	1.0	1.4	1.9	1.4	1.8	2.4	1.7	2.2	3.0	2.4	3.1	4.1	3.5	1.2	1.6	2.0
13	1.1	1.5	2.1	1.5	2.0	2.7	1.9	2.4	3.3	2.6	3.4	4.5	3.9	1.3	1.7	2.2
14	1.2	1.6	2.3	1.6	2.2	2.9	2.1	2.7	3.6	2.9	3.7	4.9	4.2	1.4	1.9	2.4
16	1.5	1.9	2.6	1.9	2.5	3.4	2.4	3.1	4.1	3.3	4.3	5.7	4.8	1.7	2.2	2.7
18	1.7	2.2	3.0	2.2	2.9	3.9	2.7	3.5	4.7	3.8	4.8	6.4	5.5	2.0	2.6	3.1
21	2.1	2.7	3.6	2.7	3.4	4.6	3.3	4.2	5.6	4.5	5.7	7.5	6.5	2.4	3.0	3.7
24	2.4	3.1	4.1	3.1	4.0	5.3	3.8	4.8	6.4	5.2	6.6	8.7	7.4	2.7	3.5	4.3
30	3.1	4.0	5.3	4.0	5.1	6.7	4.8	6.1	8.1	6.6	8.3	10.9	9.4	3.5	4.5	5.5

CS-20

株間 (cm)	4条植え			5条植え			6条植え			8条植え			10条 植え	PTO検出(POP)		
	横送り回数													4条	5条	6条
	16回	20回	26回	16回	20回	26回	16回	20回	26回	16回	20回	26回				
12	1.0	1.3	1.6	1.3	1.6	2.1	1.5	1.9	2.5	2.0	2.5	3.3	2.9	1.1	1.4	1.7
13	1.1	1.4	1.8	1.4	1.7	2.2	1.6	2.1	2.7	2.2	2.8	3.6	3.1	1.2	1.5	1.9
14	1.2	1.5	1.9	1.5	1.8	2.4	1.8	2.2	2.9	2.4	3.0	3.9	3.3	1.3	1.7	2.0
16	1.3	1.7	2.2	1.7	2.1	2.8	2.0	2.5	3.3	2.7	3.4	4.4	3.8	1.5	1.9	2.3
18	1.5	1.9	2.5	1.9	2.4	3.1	2.3	2.9	3.7	3.1	3.8	5.0	4.3	1.7	2.1	2.6
21	1.8	2.2	2.9	2.2	2.8	3.6	2.7	3.3	4.3	3.6	4.5	5.8	5.0	2.0	2.5	3.0
24	2.0	2.5	3.3	2.5	3.2	4.1	3.1	3.8	5.0	4.1	5.1	6.6	5.7	2.3	2.9	3.4
30	2.5	3.2	4.1	3.2	4.0	5.2	3.8	4.8	6.2	5.1	6.4	8.3	7.2	2.9	3.6	4.3

CS-30

株間 (cm)	4条植え			5条植え			6条植え			8条植え			10条 植え	PTO検出(POP)		
	横送り回数													4条	5条	6条
	16回	20回	26回	16回	20回	26回	16回	20回	26回	16回	20回	26回				
12	1.0	1.4	1.9	1.4	1.8	2.4	1.7	2.2	3.0	2.4	3.1	4.1	3.0	1.1	1.5	1.8
13	1.1	1.5	2.1	1.5	2.0	2.7	1.9	2.4	3.3	2.6	3.4	4.5	3.2	1.2	1.6	1.9
14	1.2	1.6	2.3	1.6	2.2	2.9	2.1	2.7	3.6	2.9	3.7	4.9	3.5	1.3	1.7	2.1
16	1.4	1.9	2.6	1.9	2.5	3.4	2.4	3.1	4.1	3.3	4.3	5.7	4.0	1.6	2.0	2.4
18	1.6	2.2	3.0	2.2	2.9	3.9	2.7	3.5	4.7	3.8	4.8	6.4	4.5	1.8	2.2	2.7
21	1.8	2.7	3.6	2.7	3.4	4.6	3.3	4.2	5.6	4.5	5.7	7.5	5.3	2.1	2.6	3.1
24	2.4	3.1	4.1	3.1	4.0	5.3	3.8	4.8	6.4	5.2	6.6	8.7	6.1	2.4	3.0	3.6
30	3.1	4.0	5.3	4.0	5.1	6.7	4.8	6.1	8.1	6.6	8.3	10.9	7.6	3.0	3.8	4.5

CS-100

株間 (cm)	5条	6条	8条
14	1.7	2.0	2.7
16	1.9	2.3	3.1
18	2.2	2.6	3.5
21	2.5	3.0	4.1
24	2.9	3.5	4.7
30	3.6	4.4	5.9



こまきちゃん
 左: CS-30
 右: CS-100

テッシン® 1キロ粒剤 田植同時散粒機のダイヤル目安表

表中の数値は、ダイヤルの目盛を示します。なお、本表は目安ですので、実際の散布の際には各機械で確認・調整するよう、お願い致します。

こまきちゃん(辛セキ)調整ダイヤルの目安

SCS-10

株間 (cm)	4条植え		5条植え					6条植え					7条植え					8条植え				
	横送り回数																					
	20	24	16	18	20	24	28	16	18	20	24	28	16	18	20	24	28	16	18	20	24	28
14	1.1	1.4	1.1	1.3	1.5	1.9	2.3	1.4	1.7	1.9	2.4	2.8	1.7	2.0	2.3	2.8	3.3	2.1	2.4	2.7	3.3	3.9
16	1.4	1.7	1.4	1.6	1.8	2.2	2.7	1.7	2.0	2.2	2.7	3.3	2.1	2.4	2.7	3.3	3.9	2.4	2.7	3.1	3.8	4.5
18	1.6	2.0	1.6	1.8	2.1	2.6	3.0	2.0	2.3	2.6	3.1	3.7	2.4	2.7	3.0	3.7	4.4	2.7	3.1	3.5	4.3	5.1
22	2.0	2.5	2.0	2.3	2.6	3.2	3.8	2.5	2.8	3.2	3.9	4.6	3.0	3.4	3.8	4.6	5.5	3.4	3.9	4.4	5.4	6.3
23	2.1	2.6	2.1	2.4	2.7	3.4	4.0	2.6	3.0	3.4	4.1	4.9	3.1	3.6	4.0	4.9	5.7	3.6	4.1	4.6	5.6	6.6
26	2.4	3.0	2.4	2.8	3.2	3.9	4.6	3.0	3.4	3.9	4.7	5.6	3.6	4.1	4.6	5.6	6.5	4.1	4.7	5.3	6.4	7.5
30	2.9	3.5	2.9	3.3	3.7	4.5	5.3	3.5	4.0	4.5	5.5	6.5	4.2	4.8	5.3	6.5	7.6	4.8	5.5	6.1	7.4	8.8

SCS-30

株間 (cm)	4条植え		5条植え					6条植え					7条植え					8条植え				
	横送り回数																					
	20	24	16	18	20	24	28	16	18	20	24	28	16	18	20	24	28	16	18	20	24	28
14	1.1	1.3	1.1	1.3	1.4	1.7	2.0	1.3	1.5	1.7	2.1	2.4	1.6	1.8	2.0	2.4	2.8	1.8	2.1	2.3	2.8	3.3
16	1.3	1.6	1.3	1.5	1.6	2.0	2.3	1.6	1.8	2.0	2.4	2.8	1.8	2.1	2.3	2.8	3.3	2.1	2.4	2.6	3.2	3.7
18	1.5	1.8	1.5	1.6	1.8	2.2	2.6	1.8	2.0	2.2	2.7	3.1	2.1	2.3	2.6	3.1	3.7	2.4	2.7	3.0	3.6	4.2
22	1.8	2.2	1.8	2.0	2.3	2.7	3.2	2.2	2.4	2.7	3.3	3.9	2.5	2.9	3.2	3.9	4.5	2.9	3.3	3.7	4.4	5.2
23	1.9	2.3	1.9	2.1	2.4	2.9	3.3	2.3	2.6	2.9	3.4	4.0	2.7	3.0	3.3	4.0	4.7	3.1	3.4	3.8	4.6	5.4
26	2.1	2.6	2.1	2.4	2.7	3.2	3.8	2.6	2.9	3.2	3.9	4.6	3.0	3.4	3.8	4.6	5.4	3.5	3.9	4.4	5.2	6.1
30	2.5	3.0	2.5	2.8	3.1	3.8	4.4	3.0	3.4	3.8	4.5	5.3	3.5	3.9	4.4	5.3	6.2	4.0	4.5	5.0	6.1	7.1

SCS-100

株間 (cm)	5条	6条	7条	8条
Free	3.3	4.0	4.7	5.3

こまきちゃん
SCS-30



PSRシリーズ(ヤンマー)調整ダイヤルの目安

	植付株数 (/3.3m ²)											
	37株	40株	43株	45株	50株	55株	60株	65株	70株	80株	85株	90株
4条植え	2.8	2.5	2.3	2.2	2.0	1.8	1.6	1.4	1.3	1.1	1.0	0.9
5条植え	3.6	3.3	3.0	2.9	2.5	2.3	2.1	1.9	1.7	1.5	1.4	1.3
6条植え	4.4	4.0	3.7	3.5	3.1	2.8	2.5	2.3	2.1	1.8	1.7	1.6
7条植え	5.2	4.8	4.4	4.2	3.7	3.3	3.0	2.8	2.5	2.2	2.0	1.9
8条植え	6.0	5.5	5.0	4.8	4.3	3.9	3.5	3.2	3.0	2.6	2.4	2.2



PS8D, A

テツシン®

1キロ粒剤

田植同時散粒機のダイヤル目安表

表中の数値は、ダイヤルの目盛を示します。なお、本表は目安ですので、実際の散布の際には各機械で確認・調整するよう、お願い致します。

まくべえⅡ／イノベーターⅡ（丸山製作所）調整ダイヤルの目安

MGT-800A/MGT-800B

	株間 (cm)	横送り回数							
		16	18	20	22	24	26	28	30
4条植え	14	3.4	3.5	3.7	3.9	4.0	4.2	4.3	4.4
	16	3.6	3.7	3.9	4.1	4.3	4.4	4.6	4.7
	18	3.7	3.9	4.1	4.3	4.5	4.7	4.8	5.0
	22	4.1	4.3	4.5	4.7	4.9	5.1	5.3	5.5
	26	4.4	4.7	4.9	5.1	5.3	5.5	5.7	5.9
	28	4.6	4.8	5.1	5.3	5.5	5.7	5.9	6.1
	30	4.7	5.0	5.2	5.5	5.7	5.9	6.1	6.3
5条植え	14	3.7	3.9	4.1	4.3	4.4	4.6	4.8	4.9
	16	3.9	4.1	4.3	4.5	4.7	4.9	5.1	5.2
	18	4.1	4.4	4.6	4.8	5.0	5.2	5.3	5.5
	22	4.5	4.8	5.0	5.3	5.5	5.7	5.9	6.1
	26	4.9	5.2	5.4	5.7	5.9	6.1	6.4	6.6
	28	5.1	5.3	5.6	5.9	6.1	6.4	6.6	6.8
	30	5.2	5.5	5.8	6.1	6.3	6.6	6.8	7.0
6条植え	14	4.0	4.2	4.4	4.6	4.8	5.0	5.2	5.3
	16	4.3	4.5	4.7	4.9	5.1	5.3	5.5	5.7
	18	4.5	4.7	5.0	5.2	5.4	5.6	5.8	6.0
	22	4.9	5.2	5.5	5.7	6.0	6.2	6.4	6.6
	26	5.3	5.6	5.9	6.2	6.4	6.7	6.9	7.2
	28	5.5	5.8	6.1	6.4	6.7	6.9	7.2	7.4
	30	5.7	6.0	6.3	6.6	6.9	7.2	7.4	7.7
8条植え	14	4.6	4.8	5.1	5.3	5.5	5.7	5.9	6.1
	16	4.9	5.1	5.4	5.6	5.9	6.1	6.3	6.5
	18	5.1	5.4	5.7	6.0	6.2	6.4	6.7	6.9
	22	5.6	6.0	6.3	6.6	6.8	7.1	7.3	7.6
	26	6.1	6.4	6.8	7.1	7.4	7.7	8.0	8.2
	28	6.3	6.7	7.0	7.4	7.7	8.0	8.2	8.5
	30	6.5	6.9	7.3	7.6	7.9	8.2	8.5	8.8
10条植え	14	5.1	5.3	5.6	5.9	6.1	6.4	6.6	6.8
	16	5.4	5.7	6.0	6.3	6.5	6.8	7.0	7.3
	18	5.7	6.0	6.3	6.6	6.9	7.2	7.4	7.7
	22	6.3	6.6	7.0	7.3	7.6	7.9	8.2	8.5
	26	6.8	7.2	7.5	7.9	8.2	8.6	8.9	9.2
	28	7.0	7.4	7.8	8.2	8.5	8.9	9.2	9.5
	30	7.3	7.7	8.1	8.5	8.8	9.2	9.5	9.8

MGT-500A/MGT-500B

	株間 (cm)	横送り回数					
		16	18	20	22	24	26
4条植え	12	3.9	4.0	4.2	4.3	4.5	4.6
	14	4.1	4.3	4.4	4.6	4.8	4.9
	16	4.3	4.5	4.7	4.8	5.0	5.2
	18	4.5	4.7	4.9	5.1	5.3	5.4
	22	4.8	5.1	5.3	5.5	5.7	5.9
	26	5.2	5.4	5.7	5.9	6.2	6.4
	28	5.3	5.6	5.9	6.1	6.4	6.6
	30	5.5	5.8	6.0	6.3	6.6	6.8
5条植え	12	4.2	4.4	4.6	4.7	4.9	5.0
	14	4.4	4.6	4.8	5.0	5.2	5.4
	16	4.7	4.9	5.1	5.3	5.5	5.7
	18	4.9	5.1	5.4	5.6	5.8	6.0
	22	5.3	5.6	5.8	6.1	6.3	6.5
	26	5.7	6.0	6.3	6.5	6.8	7.0
	28	5.9	6.2	6.5	6.8	7.0	7.3
	30	6.0	6.4	6.7	7.0	7.3	7.6
6条植え	12	4.5	4.7	4.9	5.1	5.3	5.4
	14	4.8	5.0	5.2	5.4	5.6	5.8
	16	5.0	5.3	5.5	5.7	5.9	6.2
	18	5.3	5.5	5.8	6.0	6.3	6.5
	22	5.7	6.0	6.3	6.6	6.9	7.1
	26	6.2	6.5	6.8	7.1	7.4	7.7
	28	6.4	6.7	7.0	7.4	7.7	8.0
	30	6.6	6.9	7.3	7.6	8.0	8.3
8条植え	12	5.0	5.3	5.5	5.7	5.9	6.2
	14	5.3	5.6	5.9	6.1	6.4	6.6
	16	5.6	5.9	6.2	6.5	6.7	7.0
	18	5.9	6.3	6.6	6.9	7.1	7.4
	22	6.5	6.9	7.2	7.5	7.9	8.2
	26	7.0	7.4	7.8	8.2	8.6	8.9
	28	7.3	7.7	8.1	8.5	8.9	9.3
	30	7.5	8.0	8.4	8.8	9.2	9.6

付録 1) 株間と植付株数の早見表

株間 (cm)	植付株数 (/坪)		植付株数 (/m ²)
12	91.8	90株植え	28
13	84.8		26
14	78.7	80株植え	24
16	68.9	70株植え	21
18	61.2	60株植え →慣行	19
21	52.5		16
22	50.1	50株植え	15
24	45.9	45株植え	14
25	44.1		13
28	39.4	40株植え →疎植	12
30	36.7		11

* 条間30cm、1坪≡3.306m²≡1.8182m×1.8182mで算出し、小数点1桁を四捨五入。

** 定義はないが、45株/坪以下で移植する場合を疎植栽培といわれることが多い。

